


Important notes:

1. Battery Positive Feeds must be fused
2. Unit must be connected to + 12v Ignition Feed
3. Unit must be connected to Battery Negative

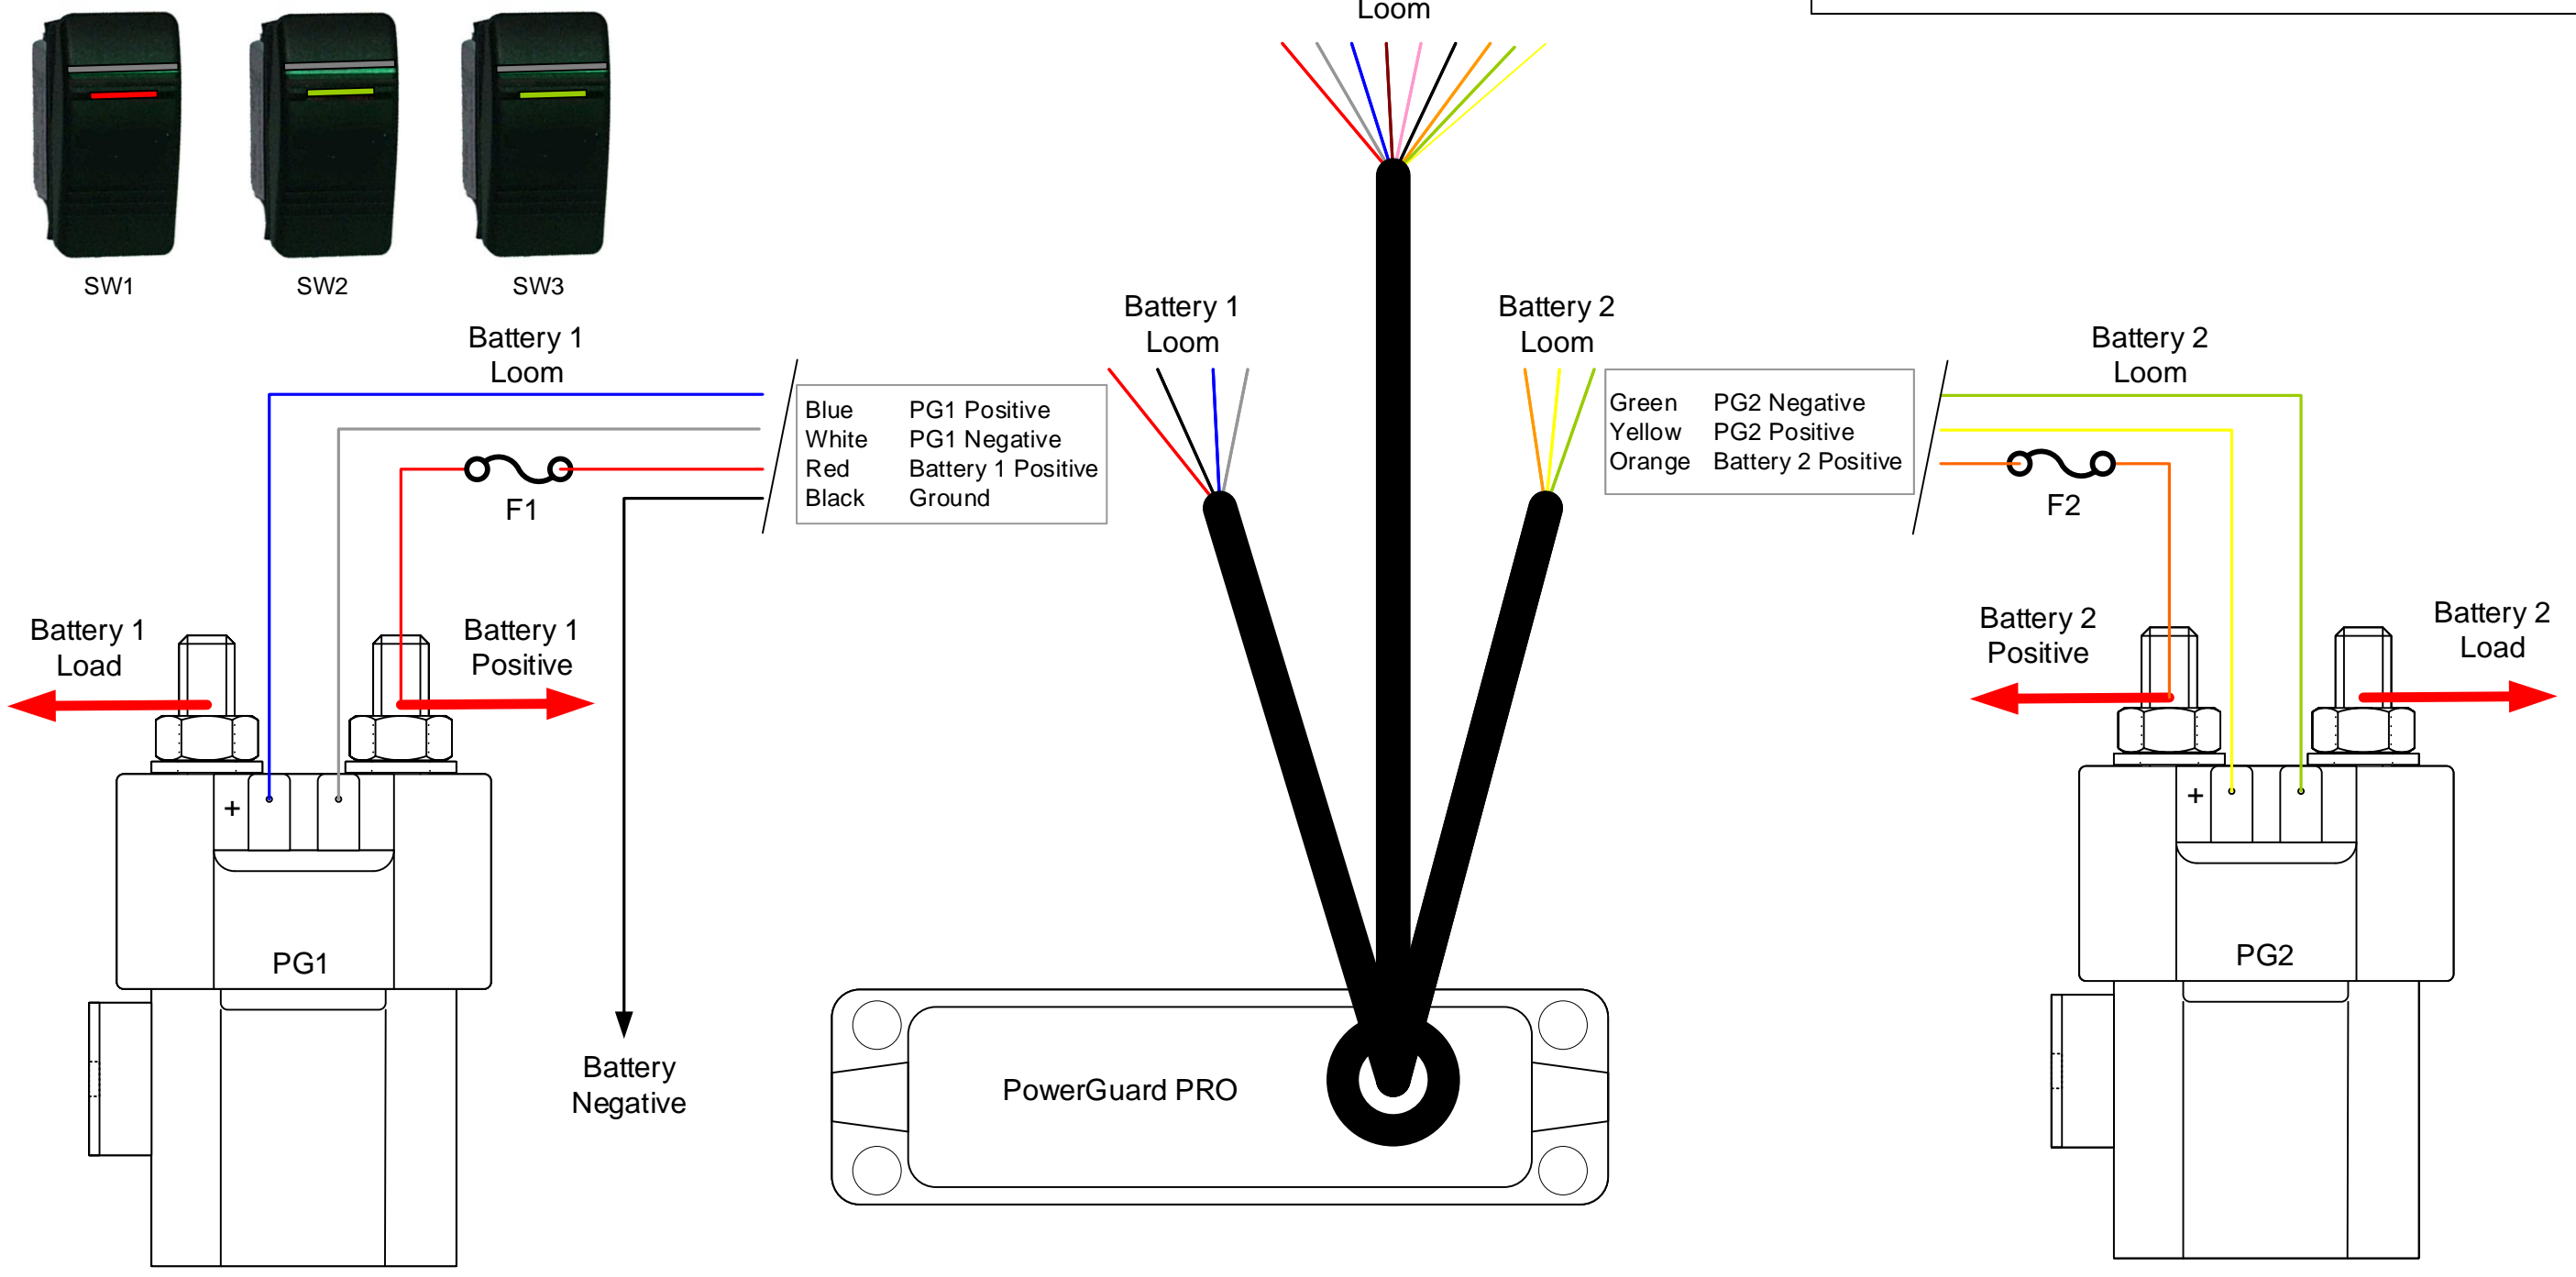

TITLE PowerGuard PRO Wiring	DRAWN MH/PS	DIMENSIONS IN	ISSUE	DATE	AUTH	MODIFICATION DESCRIPTION
	DATE 22nd Feb 2013		SCALE	02	01/14	MH
CLIENT Merlin	CHECKED	NOTES White	A	26/03/18	MH	ECR 18-014

Merlin Equipment Ltd,
 Unit 4, Cabot Business
 Village, Holyrood Close,
 Cabot Lane, Poole,
 Dorset BH17 7BX

Tel: 01202 - 697979 Fax: 01202 - 691919
 www.merlinequipment.com

© 2011 Merlin Equipment Limited. This drawing remains the sole right and property of Merlin Equipment Limited. You may not make unauthorised copies or pass this information to third parties without the express written permission of Merlin Equipment Limited.

MERLIN
The Power People

DRAWING No.
599